 


# CloudWalker

---

BÜRST E3000

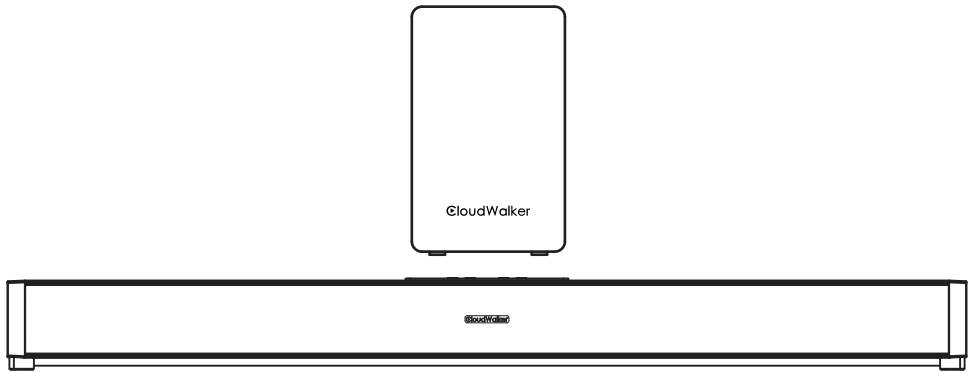

User Manual

Design and Specifications are subjected to change without prior notice.

## IMPORTANT SAFETY INSTRUCTIONS



**CAUTION**  
**RISK OF ELECTRIC SHOCK**  
**DO NOT OPEN**



CAUTION: TO REDUCE THE ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK). NO USER SERVICEABLE PART INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



**DANGEROUS VOLTAGE:** The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



**ATTENTION:** The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.**

**WARNING: USE UNDER SUPERVISION OF AN ADULT DUE TO LONG CORD** This unit has a long cord that can be easily tripped on or pulled on, causing injury. Please make sure it is arranged so that it will not drape over a tabletop, etc. Where it can be pulled on by children or tripped over accidentally.

## IMPORTANT SAFETY INSTRUCTIONS

Before using the unit, be sure to read all operating instructions carefully, please note that these are general precautions.

### **1. Read these instructions**

All the safety and operating instructions should be read before the appliance is operated.

### **2. Keep these instructions**

The safety and operating instructions should be kept for future reference.

### **3. Heed all warnings**

All warnings on the appliance and in the operating instructions should be adhered to.

### **4. Follow all instructions**

All operation and use instructions should be followed.

### **5. Do not use this apparatus near water**

The appliance should not be used near water; for example, near a bath tub,

washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.

**6. Clean only with dry cloth**

The appliance should be cleaned only as recommended by the manufacturer.

**7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.**

Slots and openings in the cabinet and in the back or bottom are provided for ventilation, to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or similar surface. This product should never be placed near or over a radiator or heat source. This product should not be placed in a built-in installation, such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

**8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.**

**9. Do not defeat the safety purpose of the grounding-type plug. A grounding type plug has two prongs and a third grounding prong. The third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.**

**10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.**

**11. Only use attachments / accessories specified by the manufacturer.**

**12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus.**

**When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.**



An appliance and cart combination should be moved with care. Quick stop, excessive force and uneven surfaces may cause the appliance and cart combination to overturn.

**13. Unplug this apparatus during lightning storms or when unused for long periods of time.**

To protect your product from a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet. This will prevent damage to the product due to lightning and power-line surges.

**14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or**

**moisture, does not operate normally, or has been dropped.**

**15. Power source**

This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For products intended to operate from battery power, or other source, refer to the operation instructions.

**16. Power lines**

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

**17. Overloading**

Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

**18. Object and liquid entry**

Never push objects of any kind into the product through openings as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid on the product.

**19. Service**

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

**20. Replacement parts**

When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original parts. Unauthorized substitutions may result in fire or electric shock or other hazards.

**21. Safety check**

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

**22. Wall or ceiling mounting**

The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

### **23. Damage requiring service**

 
Unplug this product from the wall outlet and refer service to qualified service personnel under the following conditions.

- a) When the power- supply cord or plug is damaged.
- b) If liquid has been spilled or objects have fallen into the product.
- c) If the product has been exposed to rain or water.
- d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an adjustment of other controls may result in damage and will require extensive work by a qualified technician to restore the product to its normal operation.
- e) If the product has been dropped or the cabinet has been damaged.
- f) When the product exhibits a distinct change in performance- this indicates a need for service.


## PRODUCT OVERVIEW

### SOUNDBAR


#### FRONT VIEW

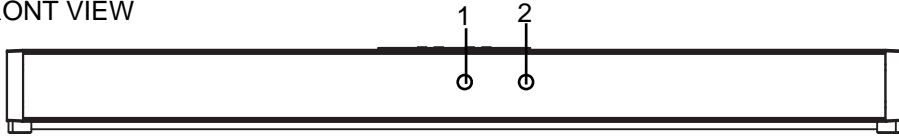


#### BOTTOM VIEW

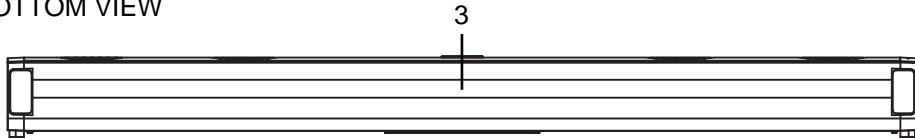 



#### CONTROL PANEL

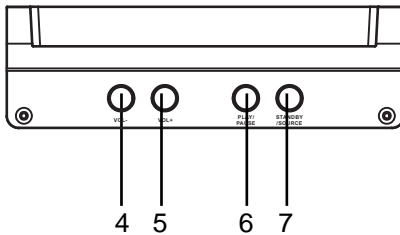 

#### REAR PANEL

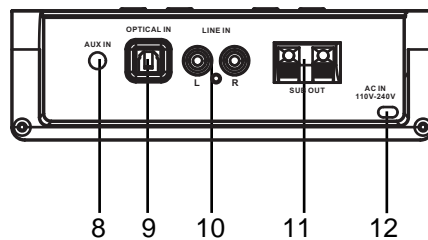 


### SUBWOOFER

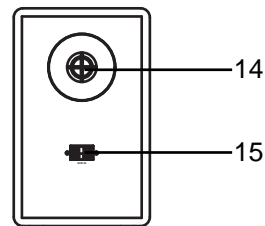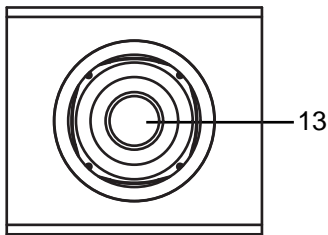  

1. Source Indicator
2. Remote Sensor
3. LED Light Effect
4. Volume Down
5. Volume Up
6. Play/Pause
7. Standby/Source
8. AUX IN

9. OPTICAL IN
10. LINE IN
11. Subwoofer Out
12. Power Cable
13. Speaker
14. Ventilation Hole
15. Subwoofer In

## REMOTE CONTROL

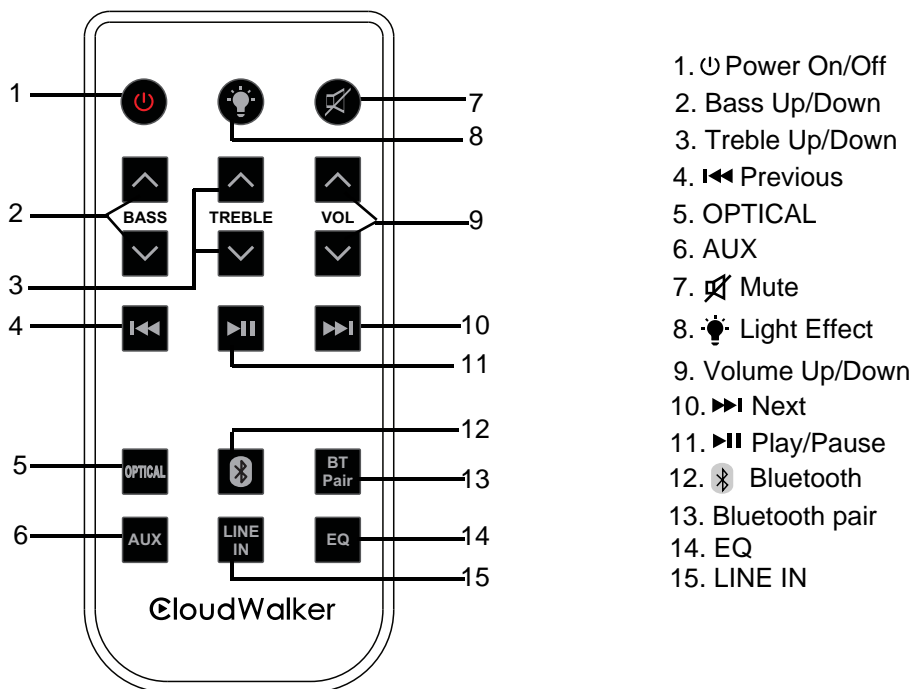 





## BATTERY INSTALLATION OF REMOTE CONTROL

### First time use

Remove and discard the insulation film as Fig.1.

### Replacing battery for Remote Control

    1. Pull out the battery holder as indicated in Fig.2.
2. Replace the old button cell with a new CR2025 button cell with the polarity markings facing upward as Fig.3.
3. Push back the battery holder as Fig.4.

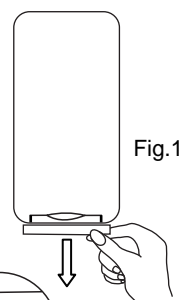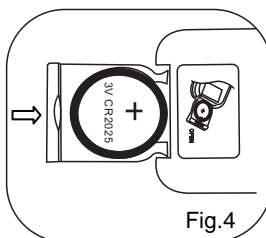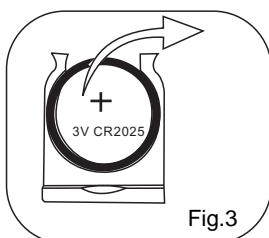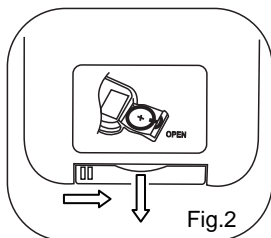

## BATTERY PRECAUTIONS

Follow these precautions when using a battery in this device:

1. Use only the size and type of battery specified.
2. Be sure to follow the correct polarity when installing the battery as indicated in the battery compartment, a reversed battery may cause damage to the device.
3. Do not mix different types of batteries together ( e.g: Alkaline and Carbon-zinc ) or old batteries with fresh ones.
4. If the batteries in the device are consumed or the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible leakage.
5. Do not try to recharge the battery as it is not intended to be recharged; it can overheat and rupture.  
( Follow the battery manufacturer's instructions.)
6. The batteries shall not be exposed to excessive heat such as sunshine or fire.
7. Clean the battery contacts and also those of the device prior to battery installation.
8. The remote control is supplied with a coin/button cell battery. If the coin / button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used battery away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed any part of the body, seek immediate medical attention.

 


## CAUTION

- Danger of explosion if the battery is incorrectly replaced.
- Replace only with the same or equivalent type.

## Remote control operation range

- When there is an obstacle between the transmitter and the unit, the unit may not operate.
- When direct sunlight, an incandescent lamp, fluorescent lamp or any other strong light shines on the REMOTE SENSOR of the unit, the operation of the remote may be unstable.

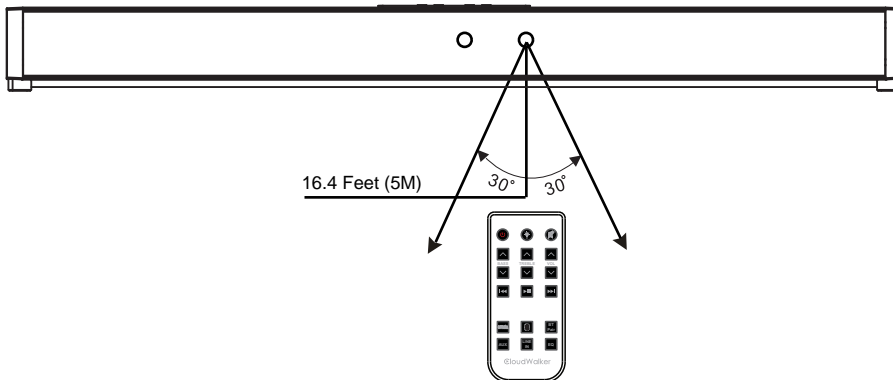




## PLACEMENT AND MOUNTING


### 1. Placing the device on a table - Ventilation

When placing the soundbar and the subwoofer on an entertainment center, bookshelf, or any type of enclosed space, be sure to allow enough space for ventilation. Otherwise, the heat generated will produce potential heat hazard.

 
SOUNDBAR

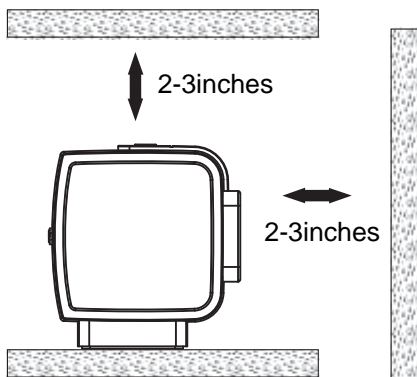


SUBWOOFER

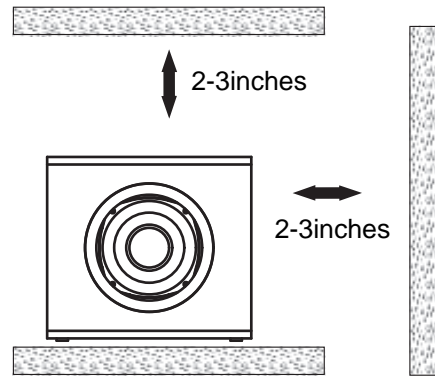 

### 2. The Installation Distance

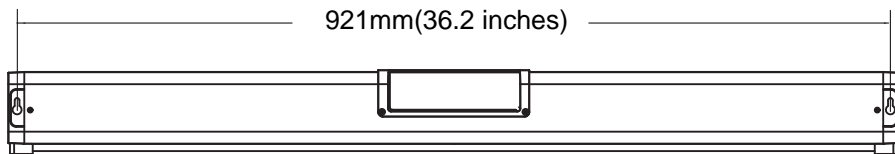 


## 2.1 Mounting to a wooden wall

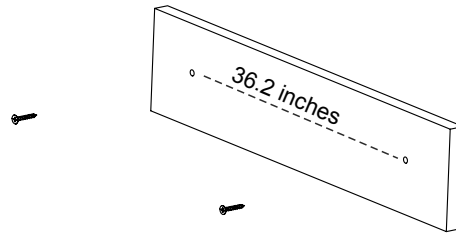 

(screws not included)

 - A. Mark the position of the mounting screws on the wall using a pencil.
- B. Drill the screws directly into the marks that you have made on the wall and leave approx. 0.3 inches length to hook the sound bar.
- C. Put the sound bar onto the mounting screws. Make sure they are firm and stable.

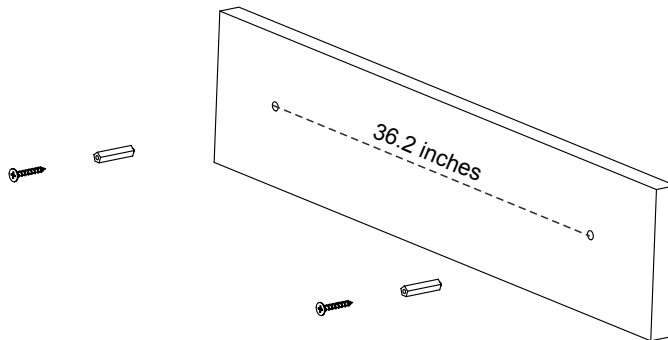

## 2.2 Mounting to a brick wall



(screws and plastic fixing plug are not included)


- A. Mark the position of the mounting screws on the wall using a pencil.
- B. Drill 2 holes on wall with a powerful electric drill.
- C. Insert the fixing plug and hammer into the holes.
- D. Secure the screws into the fixing plug and leave approx. 0.3 inches length to hook the sound bar.
- E. Put the sound bar onto the mounting screws. Make sure they are firm and stable.

## GENERAL OPERATION


1. Connect the AC plug to the AC outlet. The source indicator on the soundbar will turn red.
2. Connect the supplied speaker cable to the subwoofer out on the soundbar, then connect to the subwoofer in on the subwoofer.
3. Press and hold the Standby/Source button on the soundbar or press  button on remote control to power on the soundbar. The LED light effect will light up.
4. Press the Standby/Source button on the soundbar repeatedly to switch to desired mode. Or press the AUX, OPTICAL, , LINE IN, button on remote control for desired mode, the indicator on front of the soundbar will turn to:

Blue.....	Bluetooth Mode
Green.....	AUX IN Mode
Violet (red+blue).....	LINE IN Mode
Indigo (blue+green).....	OPTICAL IN Mode

### 5. During Playing:

- Press the VOL-/+ button on the soundbar or the VOL up and down button on the remote control repeatedly to adjust volume.
- Press the  button on remote control to turn off sound, the source indicator on the soundbar will blink, press this button again to unmute.
- Press the EQ button on remote control to set to desired EQ mode.
- Press the Bass up or down button on remote control to set to desired bass level.
- Press the Treble up or down button on remote control to set to desired treble level.

## GENERAL OPERATION

- Press the  button on remote control repeatedly to change to different LED light effects.

Mode 1: The LED light will be solid Blue.

Mode 2: The LED light will be solid Green.

Mode 3: The LED light will be solid Red.

Mode 4: The LED light will be Yellow.

Mode 5: The LED light will be Sky Blue.

Mode 6: The LED light will be Violet.


Mode 7: The LED light will be White.


Mode 8: The LED light will go from left to right according to the music rhythm.

Mode 9: The LED light with combined color will flash repeatedly and alternatively.





Mode 10: The LED light flashes in disco mode.

Mode 11: The Blue, Violet, Red, Yellow, Green and Sky Blue Light effect will go from left to right slowly and repeatedly.

- Press and hold the  button on remote control to turn on or turn off the LED light effect.

6. Press and hold the Standby/Source button on the soundbar or press  button on remote control to power off the soundbar.

## BLUETOOTH OPERATION

1. Press the Standby/Source button on the soundbar repeatedly until the indicator turns blue, or press the  button on remote control to switch to the Bluetooth mode, the indicator on front of soundbar will turn Blue and blink.
2. Power on external Bluetooth enabled device and enter Bluetooth mode and try searching the soundbar.
3. When CloudWalker BÜBST appears, select it and make connection.
4. After successful paired, the indicator will be solid blue.
5. During playing:
  - Press the  or  button on remote control to skip tracks.
  - Press the  button on remote control to pause, press it again to resume.  
Or Press the PLAY/PAUSE button on soundbar to pause, press it again to resume.
6. Press and hold the BT Pair button on remote control to disconnect current connection, then you can pair to new devices with this soundbar.

 
### NOTE:

The soundbar will be automatically connected with the last connected Bluetooth device if their Bluetooth function are activated and they are in working range.

## AUX IN OPERATION

An external Audio player(such as mobile phone, MP3 player etc.) can be connected to this soundbar and listen through the speakers.

1. Plug one end of the AUX IN cable into the AUX IN jack on the soundbar.
2. Plug another end of the AUX IN cable into the headphone jack or AUX OUT jack on the external audio player.

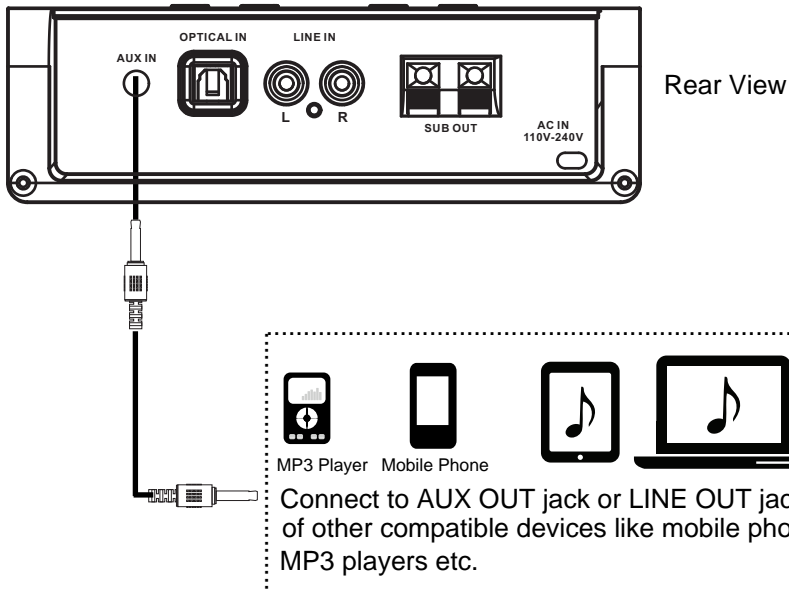


3. Press the Standby/Source button on the soundbar repeatedly or press the AUX on remote control to switch to the AUX IN mode, the indicator on front of the soundbar will turn Green.
4. Power on the connected external player and start playing.

## LINE IN OPERATION

 An external Audio/Video device(such as Set-Top Box, DVD player etc.) can be connected to this soundbar and listen through the speakers.


1. Plug one end of the LINE IN cable into the LINE IN jack(L&R) on soundbar.
2. Plug the other end of the LINE IN cable into the LINE OUT jack(L&R) on Set-Top Box or DVD player etc.

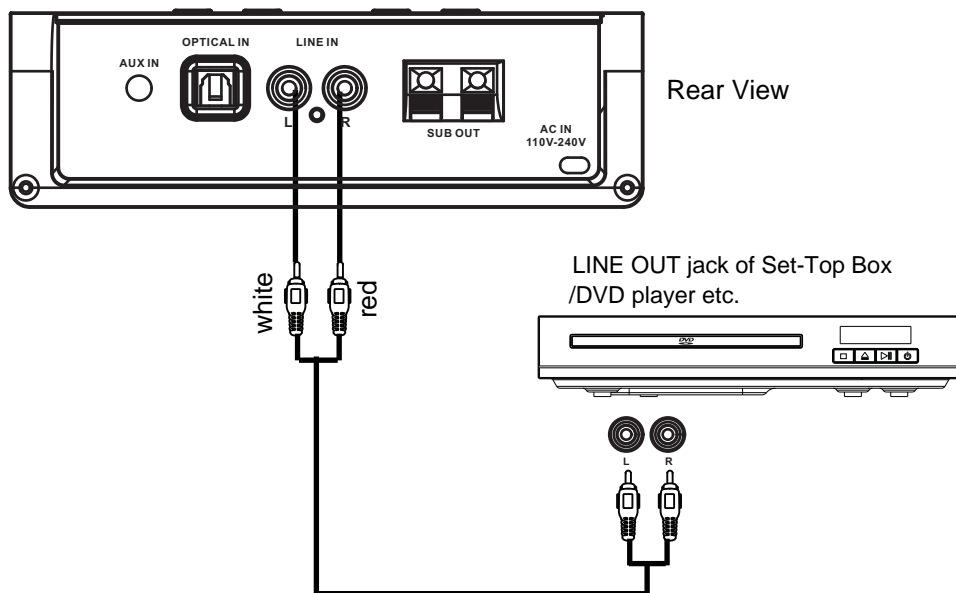


3. Press the Standby/Source button on the soundbar repeatedly or press the LINE IN button on remote control to switch to the LINE IN mode, the indicator on front of the soundbar will turn Violet(red+blue).
4. Power on the connected external device and start playing.

## OPTICAL IN OPERATION

 1. Connect the OPTICAL OUT jack from the external audio player (such as TV, DVD player etc.) to the OPTICAL IN jack on the rear of the soundbar with the optical connection cable as illustrated below:(For PCM format only)

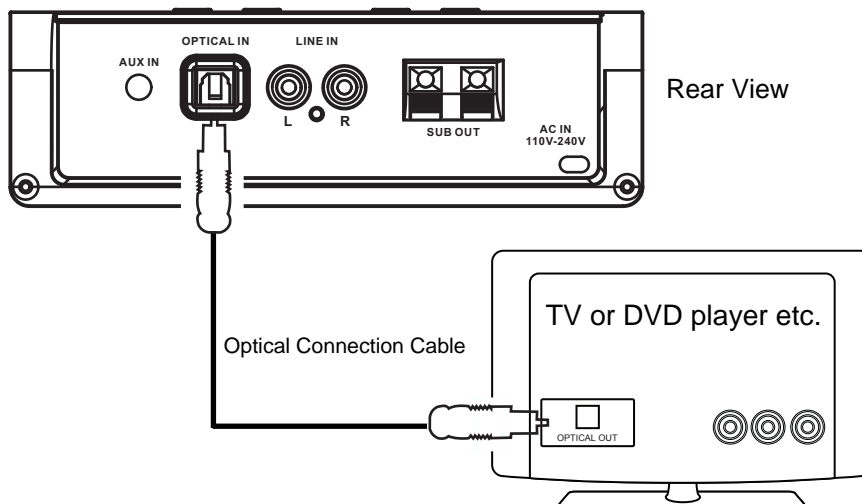

 
2. Press the Standby/Source button on soundbar repeatedly or press the OPTICAL button on remote control to switch to the OPTICAL IN mode, the indicator on front of soundbar will turn Indigo(blue+green).
3. Power on the connected external player and start playing .  
Turn on the digital audio output and set it to PCM (Pulse Code Modulation) type similar to the below figure:

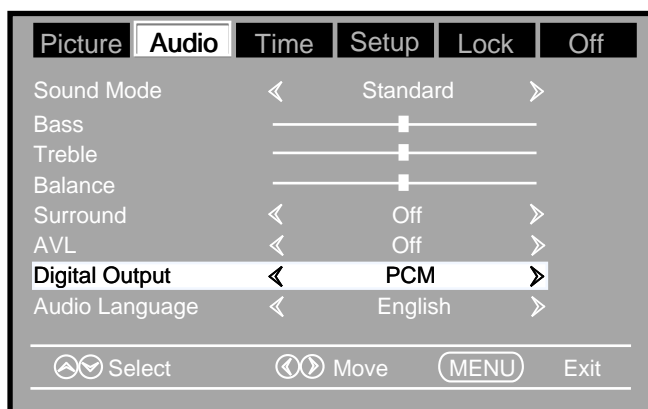



## TROUBLESHOOTING

SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
No power	The AC cable is not connected	Connect the AC cable to the wall outlet
	Soundbar is in power off mode	Press and hold the standby/source button on soundbar or press the  button on remote control to power on
No sound or low sound	Volume level in minimum position	Raise the volume level by pressing the VOL+ Button on soundbar Or press VOL up button on remote control
	The paired/connected device is not in playback mode	Play music/movie in the paired/connected device and make sure the volume level is high
	Input source incorrect	Press the standby/source button repeatedly to switch to desired mode
Sound distortion/rattle	Volume level too high	Reduce the volume level by pressing the VOL - Button on the top of the soundbar Or press VOL down button on remote control Reduce the volume level of the paired/connected device.
Remote Control not functioning	Out of range	Point the remote control to the remote sensor on the unit within 16 feet, +/-30 degrees
	The battery in the remote control is drained	Replace with new battery
Bluetooth reception failure	The external device is too far from soundbar	Put the external BT device close to the soundbar
	Have not paired	Pair the soundbar with the BT Device as mentioned

## SPECIFICATIONS

Power Supply	AC 110-240V – 50/60 Hz
Power Consumption	120W
Standby Power Consumption	1.3W
Sound Output	120W Peak Power
Audio Inputs	Bluetooth, AUX, LINE IN, Optical
Bluetooth Version	5
Presets	Jazz, Pop, Classic, Flat, Rock
Light Effects	11 Modes
Operating Temperature	-10°C-40°C
Operating Humidity	<=85%
Storage Temperature	-40°C-80°C
Storage Humidity	<=120%
Soundbar Weight (Net)	2.51 Kgs
Subwoofer Weight (Net)	3.48 Kgs
Soundbar Dimensions (W x H x D)	940 x 76 x 76 in mm
Subwoofer Dimensions (W x H x D)	300 x 270 x 180 in mm

### What's in the box

1x Soundbar  
 1x Subwoofer  
 1x Remote Control  
 1x AUX IN Cable  
 1x LINE IN Cable  
 1x Subwoofer Connection Cable  
 1x User Manual

Specifications and Accessories are subject to change without notice.



## WARRANTY CARD

CloudWalker Streaming Technologies Pvt Ltd, Company incorporated in India under the provisions of the Companies Act, 1956, which owns the brand 'CLOUDWALKER' (hereby referred to as the company) warrants to the purchaser (hereby referred to as the Customer) that the CloudWalker Soundbar carries a warranty of one year (12 months), that comprises of one year warranty on all parts including labour charges, from the date of purchase as mentioned in the purchase tax invoice.

For availing the warranty services:

- Customer can call on our **Toll Free No. 1800 102 3647** and register a call at our call centre (we are open from 9:30 am to 6:00 pm, Monday to Saturday)
- Customer has to retain and show the original purchase invoice at the time of every complaint and give a copy of it to the service engineer.

For any other queries/suggestions, please write to us at: [customercare@cloudwalker.tv](mailto:customercare@cloudwalker.tv)

### Warranty Terms & Conditions:

1. This warranty is not applicable if the original purchase invoice is not presented to the company's authorized service personnel when asked for.
2. The warranty is confined to the first purchaser of the product from the date of purchase as mentioned on the purchase invoice and is non-transferable. The warranty stands void in case of transfer of ownership of this Soundbar.
3. Warranty is applicable only on producing the purchase tax invoice which mentions the product model no & serial no.
4. The warranty is void if the Soundbar is not used in accordance to the instructions given in the instruction manual.
5. The warranty does not extend to the Soundbar which has been damaged due to misuse, neglect, accident or improper installation. Damages caused by the pests, natural calamities or abnormal high/low voltage are also not covered by this warranty.
6. This warranty does not cover loss or damage in transit, whether carried by the company's transport or by the purchaser.
7. The warranty is void if the Soundbar is repaired by any agency non authorized by the company.
8. The warranty is void if the original serial number on the Soundbar is tampered, erased, modified or if any alteration is made.
9. The warranty is void if any defects caused due to usage of external accessories / third party accessories like batteries, adaptors, headsets, cables, memory cards / malwares / spywares / virus / any applications other than operating system.

10. The warranty is void for any damages or defects arising due to normal wear and tear of parts, cosmetic damages like scratches, paint peel off, color fading away / color changes, LED not working, etc.
11. The warranty is void for any defects or damages arising due to customer induced damages, physical damages, breakages, speaker defects caused due to unexpected external pressure, liquid spill, air bubbles, black spot, black patches, liquid crystal damage, stains, dust inside the Soundbar, defects arising due to high humid and moisture conditions or liquid/solvent/any chemicals leakage in to the Soundbar while cleaning by the customer, modification or alteration of any nature made in the electrical circuitry or physical construction of the product.
12. The company shall not be liable for any delay in rectifying the set, in the event of non-availability of the components and shall in no way be responsible for any losses direct or indirect arising out of the delay, if any.
13. The warranty does not extend to the accessories external to the Soundbar, if any, supplied with the Soundbar (cables, remote).
14. In the event the Soundbar requires urgent attention, the purchaser should arrange to deliver the same to the nearest service center at his/her own cost.
15. This Soundbar is meant for home entertainment purpose. Warranty is not valid if the Soundbar is used for the commercial purpose.
16. The company's obligation under this warranty shall be limited to repair or providing replacement of part/s only. This warranty shall not cover any consequential or resulting liability, injury, damage or loss to property or life arising directly or indirectly out of any defect in the product.
17. The company or its authorized service centre, reserves the right to retain any part/s or component/s replaced at its discretion in the event of a defect noticed in the Soundbar during the warranty period. The part/s or component/s or unit/s replaced will become the property of the company.
18. In the event of repairs / replacement of any part/s of the unit, this warranty will thereafter continue and remain in force only for the unexpired period of the warranty. Moreover, the time taken for repair / replacement and in transit, whether under the warranty or otherwise, shall not be excluded from the warranty period.
19. Limitation of implied warranties: To the extent allowed by local law, this product is provided to you "as is" without warranties or conditions of any kind, whether oral or written, expressed or implied. CloudWalker specifically disclaims any implied warranties or conditions of merchantability, satisfactory quality, non-infringement and fitness for a particular purpose.
20. This warranty is subjected to Mumbai Jurisdiction and operated through the courts located in Mumbai Jurisdiction only. Your acceptance of the product is subject to acceptance of this condition.

Customer's Signature: \_\_\_\_\_

Dealer Name, Signature & Stamp: \_\_\_\_\_



**CloudWalker**

© CloudWalker Streaming Technologies Pvt. Ltd.  
All rights reserved.

#### **CAUTION**

To prevent electrical shock, do not open the Soundbar. There are no user serviceable parts inside. Please refer to qualified service personnel for repairs.

Disposal may be regulated in your community due to environmental considerations. For disposal or recycling information, please contact 1800-102-3647 / 1800-200-0977 or email at [customer@cloudwalker.tv](mailto:customer@cloudwalker.tv)