 


# CloudWalker

---

 
**BÜRST V1000**

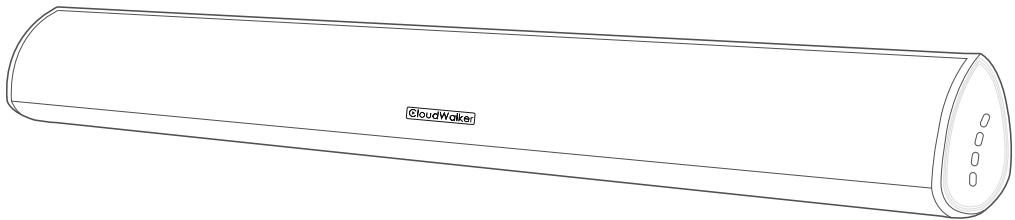

**User Manual**

Design and Specifications are subjected to change without prior notice.

## IMPORTANT SAFETY INSTRUCTIONS

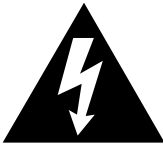

**CAUTION**  
**RISK OF ELECTRIC SHOCK**  
**DO NOT OPEN**



CAUTION: TO REDUCE THE ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK). NO USER SERVICEABLE PART INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



**DANGEROUS VOLTAGE:** The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



**ATTENTION:** The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.


**WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.**

 **WARNING: USE UNDER SUPERVISION OF AN ADULT DUE TO LONG CORD** This unit has a long cord that can be easily tripped on or pulled on, causing injury. Please make sure it is arranged so that it will not drape over a tabletop, etc. Where it can be pulled on by children or tripped over accidentally.

## PRODUCT OVERVIEW


### SOUNDBAR

#### FRONT VIEW

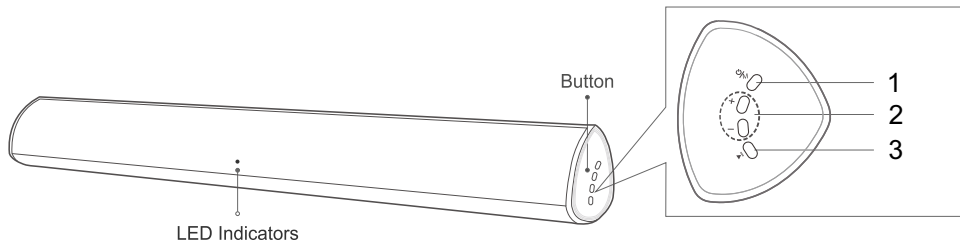

  
- 1.Power On/Off & Source Button
- 2.Volume Up/Down
- 3.Play/Pause



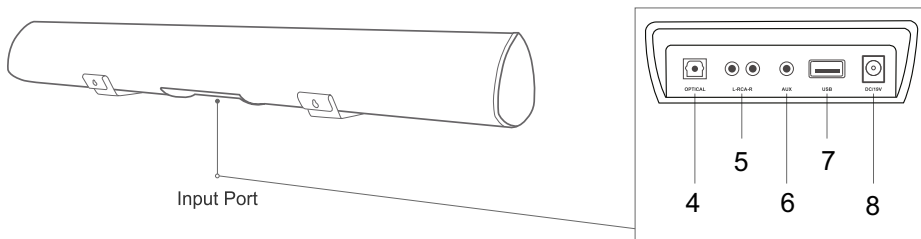





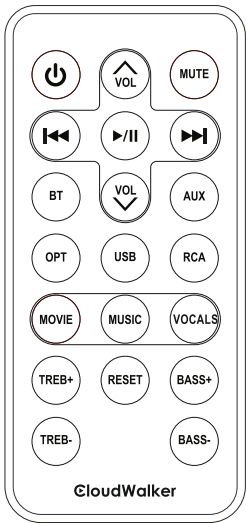











#### REAR VIEW



- 4.Optical IN
- 5.RCA (LINE IN)
- 6.AUX IN
- 7.USB
- 8.Power

 
# REMOTE CONTROL



	Power Button		Mute/Unmute		Volume Up
	Volume Down		Previous Track		Next Track
	Play/Pause		Bluetooth		Optical
	AUX		RCA (Line IN)		USB
	Movie		Music		Vocals
	Treble Up/Down		Bass Up/Down		Restore Factory Settings
					

# GENERAL OPERATION

The LED Indicators will behave differently with each button on the remote control.



Bluetooth (Blue color LED)				Mobile phones or any other compatible Bluetooth enabled devices
AUX (Orange color LED)				TV or other compatible devices
Optical (White color LED)				TV or other compatible devices
RCA(LINE IN) (Light Blue color LED)				TV or other compatible devices
USB (Purple color LED)				USB

## TROUBLESHOOTING

SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
No sound or low sound	Volume level in minimum position	Raise the volume level by pressing the VOL+ Button on soundbar Or press VOL up button on remote control
	The paired/connected device is not in playback mode	Play music/move in the paired/connected device and make sure the volume level is high
	Input source incorrect	Press the source button repeatedly to switch to desired mode
Sound distortion/rattle	Volume level too high	Reduce the volume level by pressing the VOL - Button on the top of the soundbar Or press VOL down button on remote control Reduce the volume level of the paired/connected device.
Remote Control not functioning	Out of range	Point the remote control to the remote sensor on the unit within 16 feet, +/-30 degrees
	The battery in the remote control is drained	Replace with new battery
Bluetooth reception failure	The external device is too far from soundbar	Put the external BT device close to the soundbar
	Have not paired	Pair the soundbar with the BT Device as mentioned

## SPECIFICATIONS

Power Supply	AC 100-240V - 50/60 Hz
Power Consumption	70W
Standby Power Consumption	0.5W
Sound Output	70W Peak Power
Audio Inputs	Bluetooth, AUX, LINE IN, Optical, USB
Bluetooth Version	5
Presets	Movie, Music, Vocals
Operating Temperature	-40°C-60°C
Operating Humidity	40%-60%RH
Storage Temperature	-10°C-40°C
Storage Humidity	90%RH
Soundbar Weight (Net)	2.32 Kgs
Soundbar Dimensions (W x H x D)	710 x 100 x 105 in mm

# CloudWalker

## WARRANTY CARD



CloudWalker Streaming Technologies Pvt Ltd, Company incorporated in India under the provisions of the Companies Act, 1956, which owns the brand 'CLOUDWALKER' (hereby referred to as the company) warrants to the purchaser (hereby referred to as the Customer) that the CloudWalker Soundbar carries a warranty of one year (12 months), that comprises of one year warranty on all parts including labour charges, from the date of purchase as mentioned in the purchase tax invoice.

For availing the warranty services:

- Customer can call on our **Toll Free No. 1800 102 3647** and register a call at our call centre (we are open from 9:30 am to 6:00 pm, Monday to Saturday)
- Customer has to retain and show the original purchase invoice at the time of every complaint and give a copy of it to the service engineer.

For any other queries/suggestions, please write to us at: [customercare@cloudwalker.tv](mailto:customercare@cloudwalker.tv)

### Warranty Terms & Conditions:

1. This warranty is not applicable if the original purchase invoice is not presented to the company's authorized service personnel when asked for.
2. The warranty is confined to the first purchaser of the product from the date of purchase as mentioned on the purchase invoice and is non-transferable. The warranty stands void in case of transfer of ownership of this Soundbar.
3. Warranty is applicable only on producing the purchase tax invoice which mentions the product model no & serial no.
4. The warranty is void if the Soundbar is not used in accordance to the instructions given in the instruction manual.
5. The warranty does not extend to the Soundbar which has been damaged due to misuse, neglect, accident or improper installation. Damages caused by the pests, natural calamities or abnormal high/low voltage are also not covered by this warranty.
6. This warranty does not cover loss or damage in transit, whether carried by the company's transport or by the purchaser.
7. The warranty is void if the Soundbar is repaired by any agency non authorized by the company.
8. The warranty is void if the original serial number on the Soundbar is tampered, erased, modified or if any alteration is made.
9. The warranty is void if any defects caused due to usage of external accessories / third party accessories like batteries, adaptors, headsets, cables, memory cards / malwares / spywares / virus / any applications other than operating system.

10. The warranty is void for any damages or defects arising due to normal wear and tear of parts, cosmetic damages like scratches, paint peel off, color fading away / color changes, LED not working, etc.
11. The warranty is void for any defects or damages arising due to customer induced damages, physical damages, breakages, speaker defects caused due to unexpected external pressure, liquid spill, air bubbles, black spot, black patches, liquid crystal damage, stains, dust inside the Soundbar, defects arising due to high humid and moisture conditions or liquid/solvent/any chemicals leakage in to the Soundbar while cleaning by the customer, modification or alteration of any nature made in the electrical circuitry or physical construction of the product.
12. The company shall not be liable for any delay in rectifying the set, in the event of non-availability of the components and shall in no way be responsible for any losses direct or indirect arising out of the delay, if any.
13. The warranty does not extend to the accessories external to the Soundbar, if any, supplied with the Soundbar (cables, remote).
14. In the event the Soundbar requires urgent attention, the purchaser should arrange to deliver the same to the nearest service center at his/her own cost.
15. This Soundbar is meant for home entertainment purpose. Warranty is not valid if the Soundbar is used for the commercial purpose.
16. The company's obligation under this warranty shall be limited to repair or providing replacement of part/s only. This warranty shall not cover any consequential or resulting liability, injury, damage or loss to property or life arising directly or indirectly out of any defect in the product.
17. The company or its authorized service centre, reserves the right to retain any part/s or component/s replaced at its discretion in the event of a defect noticed in the Soundbar during the warranty period. The part/s or component/s or unit/s replaced will become the property of the company.
18. In the event of repairs / replacement of any part/s of the unit, this warranty will thereafter continue and remain in force only for the unexpired period of the warranty. Moreover, the time taken for repair / replacement and in transit, whether under the warranty or otherwise, shall not be excluded from the warranty period.
19. Limitation of implied warranties: To the extent allowed by local law, this product is provided to you "as is" without warranties or conditions of any kind, whether oral or written, expressed or implied. CloudWalker specifically disclaims any implied warranties or conditions of merchantability, satisfactory quality, non-infringement and fitness for a particular purpose.
20. This warranty is subjected to Mumbai Jurisdiction and operated through the courts located in Mumbai Jurisdiction only. Your acceptance of the product is subject to acceptance of this condition.

Customer's Signature: \_\_\_\_\_

Dealer Name, Signature & Stamp: \_\_\_\_\_



## CloudWalker

© CloudWalker Streaming Technologies Pvt. Ltd.  
All rights reserved.

### CAUTION

To prevent electrical shock, do not open the Soundbar. There are no user serviceable parts inside. Please refer to qualified service personnel for repairs.

Disposal may be regulated in your community due to environmental considerations. For disposal or recycling information, please contact 1800-102-3647 / 1800-200-0977 or email at [customer@cloudwalker.tv](mailto:customer@cloudwalker.tv)